1. Locating the controls

I H10 Player

Actual player may vary slightly from images shown.

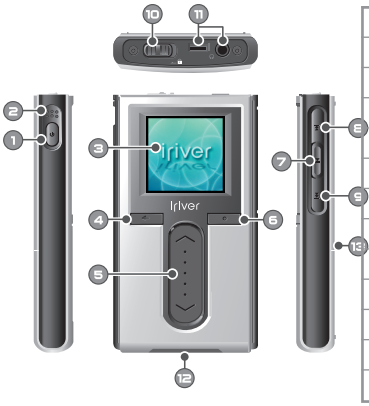

1	Power ON/OFF button
2	Built-in microphone
3	LCD screen
4	Cancel button
5	Up / Down scroll button
6	Select button
7	Play / Pause button
8	Previous button
9	Next button
10	HOLD switch
11	Earphone / Remote control jack
12	USB / Adapter jack
13	Battery release button

2. Connecting the product

I Connecting the power – connecting the adapter (player)

Be sure to use the supplied AC adapter to connect the cable to the player.

1. Connect the cable to the player.
2. Connect the AC adapter to the player's DC jack.
3. Connect the AC adapter plug to a power socket.
   The rated voltage of the AC adapter is 100~240V, 50~60Hz.

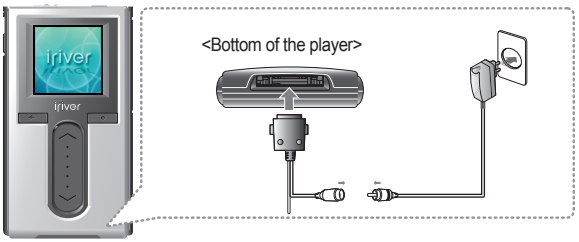

Note

- If a power source is connected, the charging indicator will be turned on. (The indicator is turned off after completion.)

01-QSG-ENG.indd 1 2004-11-22 ¿ÀÈÄ 4:26:46

I Connecting PC – Connecting cable

1. Connect the player and PC using the cable supplied with the player.
2. The icon will appear on the system tray when the player is connected successfully.
3. The driver icon (H10) will appear on the Windows Explorer.

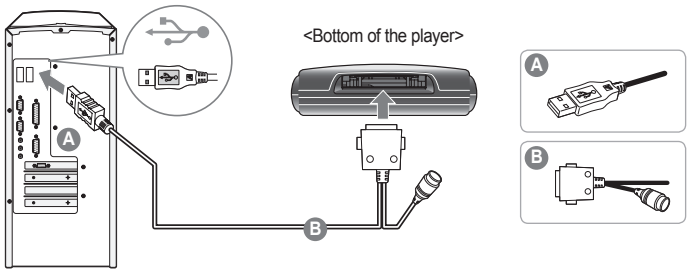

I Connecting PC – Disconnecting cable

1. Click the icon on the system tray.
2. Click the popup message as shown below.

3. When the "Safe To Remove Hardware" popup window appears, disconnect the USB cable.

3. Installing the software

I Installing iriver plus

1. The program installation process will start automatically after inserting the Installation CD to the PC's CD-ROM drive. If the program installation process does not start automatically, click the "My Computer" icon and run iriver_setup_full.exe file in the CD-ROM drive.
2. If the "Installer Language" window appears, select the desired language and click the "OK" button.

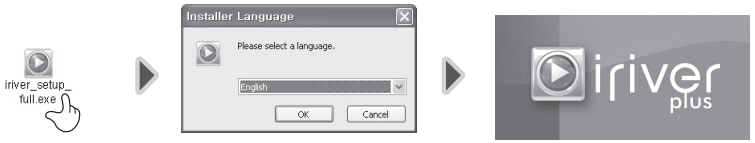

3. If the program starts, follow the on-screen menu of the Installer program.

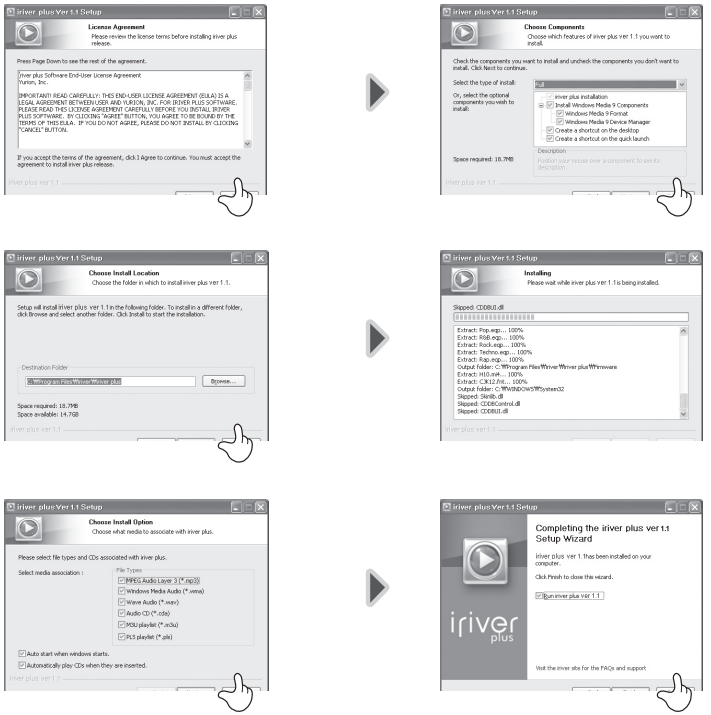

01-QSG-ENG.indd 2-3 2004-11-22 ¿ÀÈÄ 4:26:48

4. Quick start

I About button usage

Button image with white background = Press the button shortly.
Button image with black background = Press and hold the button.

I Turning on/off the player

1 Turning on the player

Press the [⏻] button.

The initial screen will be displayed.

Note

- If the player does not run after pressing the button, check whether the HOLD switch is set to OFF or the battery is discharged.

1 **Turning off the player**

Press and hold the [⏻] button.

The player will be turned off.

I Controlling volume

1 Use the [▲/▼] scroll to control volume during playback.

▲ : Volume up

▼ : Volume down

I Changing mode

1 Select the "MUSIC" mode using the [▲/▼] scroll when the main screen appears.

There are 7 modes including MUSIC, FM RADIO, RECORDING, PHOTO, TEXT, BROWSER, SETTINGS.

Select Mode

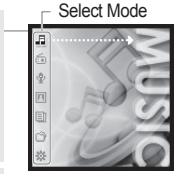

2 Press the [○] button to display the desired mode screen.

3 If you press and hold the [⬅] button in any screen, you can return to the main screen.

5. Basic operation

I Playing music files

1 Press the [⏻] button after releasing the HOLD switch to display the initial screen.

2 Select the <MUSIC> mode using the [▲/▼] scroll when the main screen appears.

3 Press the [○] button to display the Search screen.

4 Use the [▲/▼] scroll the select the item.

Example: In case of selecting <Titles>

[○] : Press it to move to the desired item.

[▲/▼] : Moves to the desired item.

[⇦] : Press it to move to the previous screen.

[⬅] : Press and hold it to move to the main screen directly.

5 Press the [○] button after selecting the music file to play it.

During playback, press the [▷II] button to pauseplayback. Press it again to resume playback.

In the Search or main screen, press the [▷II] button to play the recently palyed music.

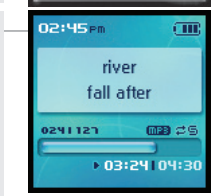

01-QSG-ENG.indd 4-5 2004-11-22 ¿ÀÈÄ 4:27:00



6 Playing previous/next file

Press the [⏮/⏭] button during playback to play previous / next file.

⏮ : Plays previous file

⏭ : Plays next file

7 Fast-forward / Fast-reverse

Press and hold the [⏮/⏭] button during playback for fast-forward or fast-reverse playback.

⏮ : Fast-reverse

⏭ : Fast-forward

I Listening to FM radio



1 Select the <FM RADIO> mode using the [⏶/⏷] scroll when the main screen appears.

2 Press the [○] button to display the Sub screen.

3 Setup the Preset by pressing the [⏯] button and press the [⏮/⏭] button to select the Previous/Next FM station.

⏮ : To previous station

⏭ : To next station



4 Use the [⏶/⏷] scroll to control volume during listening to FM radio.

Note

■ In areas where the signal is weak, some channels may be unavailable or reception may be poor.

01-QSG-ENG.indd 6-7 2004-11-22 ¿ÀÈÄ 4:27:12

I Recording Voice



1 Select the <RECORDING> mode using the [▲/▼] scroll when the main screen appears.

2 Press the [○] button to display the Recording Source screen.



3 Move to <Voice> using the [▲/▼] scroll and confirm it by pressing the [○] button.

4 Press the [○] button to start recording.

5 Press the [○] button to stop recording.

Note

- Volume control is not available while recording.
- Keep the proper distance between the microphone and the mouse while recording.

01-QSG-ENG.indd 8 2004-11-22 ¿ÀÈÄ 4:27:12